




FP-14-00

Jaguar Sovereign, XJ6, XJ12
09/1994 to 09/1997

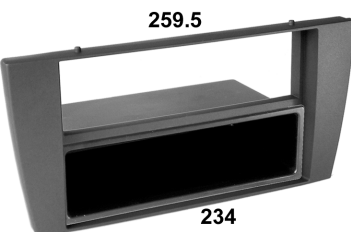

123


FP-14-01

Jaguar X/S Type
03/2001 on



No 571E

Stereo Hook up
Jaguar S-Type, XJR,
XJ8, X-Type
to ISO
20 PIN (4 Large, 16 Small)

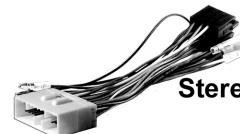

No 565E

Stereo Hook up
Jaguar
XJ6, XJ8, XK8 up to 2002, to ISO
20 PIN



No 566E


Stereo Hook up
Jaguar
9/1994 on, to ISO
14 PIN

MERCEDES




FP-23-01

Mercedes
C class,
Vito, Vaneo 11/2000 on

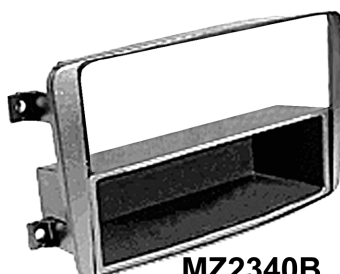


MZ2340B

Mercedes
C230 Coupe 11/2000 on

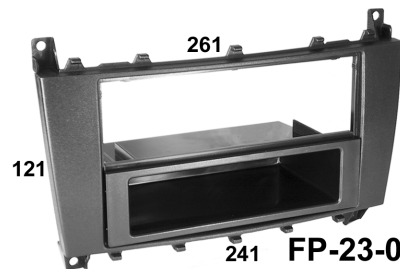

FP-23-03


Mercedes C class
11/2004 on

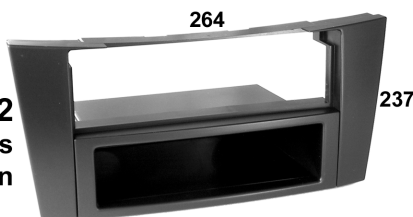

FP-23-02

Mercedes E class
09/2004 on

FP-23-00
Mercedes
Sprinter
08/2000 on

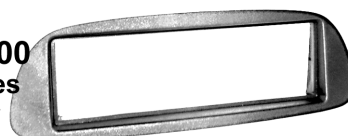

PEUGEOT



FP-04-00


Peugeot 106

10/1991 to 06/1996



FP-04-03

Peugeot 206
10/1998 on

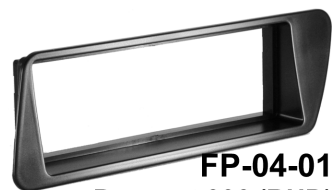

FP-04-01


Peugeot 306 (RHD)
1993 on



FP-04-02

Peugeot 406


ED - PF10
Peugeot / Fiat
Aerial to Std Male
Aerial Adaptor Lead

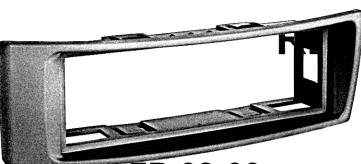

FP-08-00 (Black)

FP-08-00G (Grey)

Renault Megane, Scenic 04/1996 to 01/2002

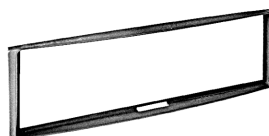

FP-08-01

Renault Megane, Scenic
01/2002 to 01/2005