





FP-10-03
Stereo Fitting Panel
Volvo 240 (centre)

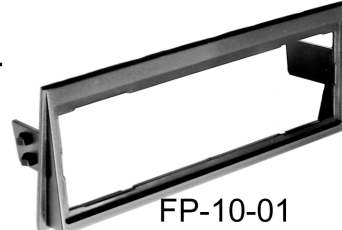

FP-10-01
Volvo 740, 760,
940, 960

VOLVO

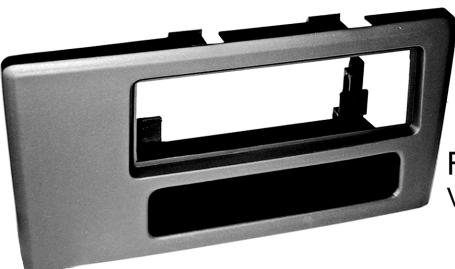


FP-10-04
Volvo V70, S60



FP-10-05
Volvo S80



No 563E
Stereo Hook up
Volvo
S40, V40, S60, S70,
V70, S80, to ISO
12 + 12 PIN

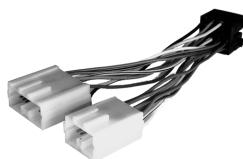

No 567E
Stereo Hook up
Volvo
850, 960, to ISO
14 + 10 PIN



ED-VO10
Volvo
Aerial to Std Male
Aerial Adaptor Lead



VOARB
Volvo
Head unit to Std Female
Reverse Aerial
Adaptor Lead


VW



VW2310B
Volkswagen
1998 on



FP-17-00
VW Golf MkIV
Double DIN

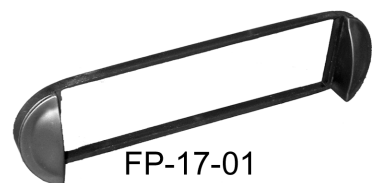

FP-17-01
VW Beetle 1998 on
Suits Flipdown Stereo




FP-17-02
VW Beetle 1998 on
Secure Kit



FP-17-03
VW Golf 04 on
VW Touran 03 on



FP-17-04
VW Touareg

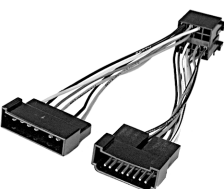

No 555E
Stereo Hook up
Ford Galaxy / VW Sharon
to ISO
8 + 14 PIN



No 560E
Stereo Hook up
BMW
3 / 5 Series on to ISO
16 PIN (DO NOT USE ON MONDEO,
WIRING DIFFERENT)



ED-VWA2
VW (amplified)
Aerial Adaptor
For cars with Aerial
Trigger Power Supply
Feeding into Coaxial Cable



ED-VWA4
Amplified Aerial Lead
Audi/BMW/VW
2000 on