




LEADS TO MATCH ORIGINAL CAR WIRING HARNESSES




No 501
Speaker Hook up
Nissan
2 PIN White Plug

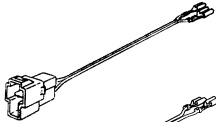


No 502
Speaker Hook up
2 PIN




No 503
Speaker Hook up
Nissan
2 PIN Brown Plug




No 512
Suzuki 1995 on
12 PIN




No 528
Holden Commodore
VT 1997 on
18 PIN




No 529
Holden Commodore
VR - VS 1993 to 1998
14 PIN




No 530
Holden Commodore
VN - VP 1988 to 1993
13 PIN




No 531
Mazda, Ford Ex Japan,
Falcon EF - EL 1995 to 98
8 PIN + 12 PIN

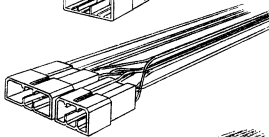


No 532
Mitsubishi 1985 to 1994
Ex-Japan
5 PIN + 9 PIN




No 533
Mitsubishi 1995 on
14 PIN

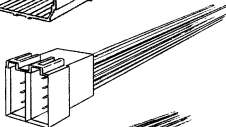


No 534
European
16 PIN

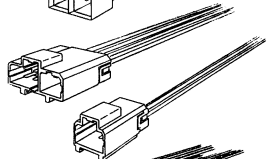


No 535
Nissan
10 PIN + 6 PIN

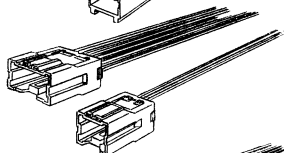


No 536
Nissan 1995 on
Ex-Japan
10 PIN + 6 PIN




No 537
Subaru 1993 on
14 PIN

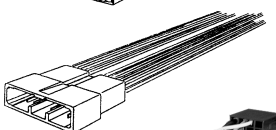


No 538
Honda 1986 on
16 PIN

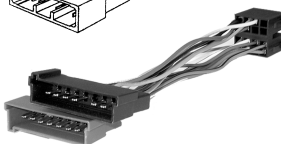


No 539E
Ford Mondeo /
Escort / Transit
8 PIN + 8 PIN

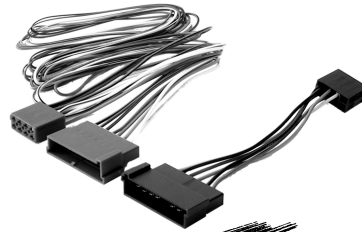


No 539EABP
Ford
With Amp Bypass
8 PIN + 8 PIN

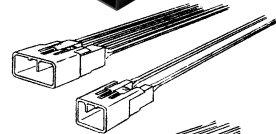


No 540
Toyota 1987 on
10 PIN + 6 PIN

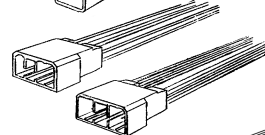


No 541
Subaru pre 1993
9 PIN + 7 PIN



No 542
Honda 1998 on
Suzuki 2001 on
20 PIN (8 Large, 12 Small)




No 543
Hyundai 1992 - 99
14 PIN




No 544
Mazda / Ford Japan
1986-89
4 + 4 + 3 + 1 PIN




No 545
Ssangyong Musso
18 PIN

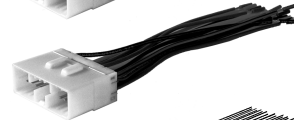


No 546
Ssangyong Korando, Rexton
Daewoo
18 PIN

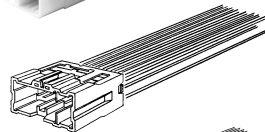


No 547
Nissan 2001 on
16 PIN

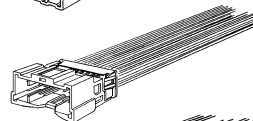

No 548
Hyundai 1999 on
Kia
16 PIN

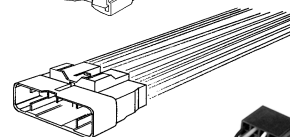

No 549
Isuzu / Rodeo
1996 on
16 PIN

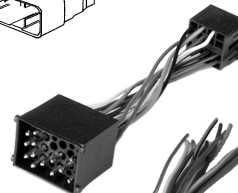

No 550E
BMW
3/5 Series
17 PIN



No 554
Ford Falcon
1997 on
20 PIN (4 Large, 4 Med, 12 Small)



No 555E
Ford Galaxy / VW Sharon
14 PIN + 8 PIN



No 556E
Ford Mondeo 2003 on
16 PIN (DO NOT USE WITH BMW OR VW -
WIRING DIFFERENT)