


LEADS TO MATCH ORIGINAL CAR WIRING HARNESSES



No 557E
Mazda
2003 on to ISO
24 PIN (3 Large, 8 Med, 13 Small)

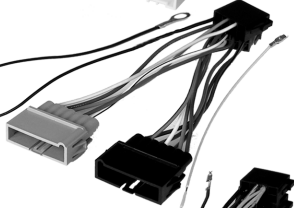

No 558E
Chrysler
1984 on to ISO
7 + 7 PIN



No 559E
Chrysler / Jeep
2002 on to ISO
22 PIN (6 Large, 16 Small)




No 560E
BMW 3 / 5 Series on to ISO
16 PIN (DO NOT USE ON MONDEO,
WIRING DIFFERENT)



No 561E
Jeep
1988 until 1997 to ISO
13 + 1 PIN



No 562E
KIA
to ISO
20 PIN (4 Large, 16 Small)

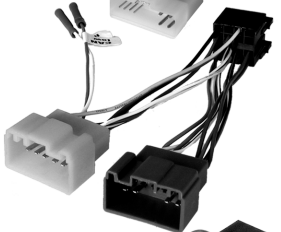


No 563E
Volvo
S40, V40, S60, S70,
V70, S80, to ISO
12 + 12 PIN



No 565E
Jaguar
XJ6, XJ8, XK8, up to 7/2002, to ISO
20 PIN



No 566E
Jaguar
up to 9/1994, to ISO
14 PIN

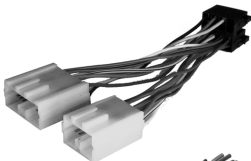

No 567E
Volvo
850, 960, to ISO
14 + 10 PIN



No 568
Falcon EA, EB, ED
1988 to 1994
13 PIN



No 569E
GM (USA) & Toyota Cavalier
to ISO
up to 2002
21 PIN



No 570E
Ford (USA)
to ISO 2003 on
24 PIN (3 Large, 8 Med, 13 Small)



No 571E
Jaguar S-Type, XJR, XJ8,
X-Type to ISO
20 PIN (4 Large, 16 Small)



FD16B
Ford 1998 on
16 PIN




FD23B
4 Speaker Connector
Ford 2003 on
24 PIN (3 Large, 8 Med, 13 Small)



VWO3B
VW 2002 on
16 PIN

Direct Connection Harnesses

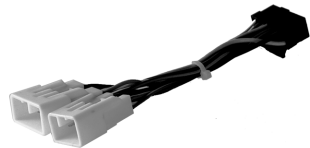

No 540A Alpine
No 540E European
No 540JVC JVC
No 540PA2 Panasonic
No 540PI2 Pioneer
No 540SNY Sony
Stereo Hook up
Toyota 1987 on & Daihatsu
to Stereo
10 + 6 PIN

Direct Connection Harnesses are also available for most cars.